



# YD-704 投幣器設定使用說明書

- 1、按下設定鍵⑤四顆 LED 燈⑦會同時亮起，再按下設定鍵第一顆 LED 燈會出現慢閃狀態，此時可投入 20 枚，第一種幣值的樣幣。注：取 20 枚不同年份及新舊的樣幣。
- 2、第一種幣值樣幣設定完成後，第二個 LED 燈會閃爍，再按一次設定鍵，第一個 LED 燈保持亮點，第二個 LED 燈會閃爍，即再投入第二種幣值的樣幣。（取 20 枚不同年份及新舊的樣幣）第三種和一、二相同
- 3、幣值設定完成後，四個 LED 燈同時閃爍狀態，3 秒鐘後即可正常使用。

## YD-704 Coin Selector

### Coin instructions

- 1 It can be set up 4 kinds of value.
2. Press the SET button, four LED bright, and then press the SET button again, the first LED will flash, input 20 pcs of the first coin. Finish and second LED will flash and then press the SET button, the first LED bright and the second LED flash, input 20 pcs of the second coin. Finish and third LED will flash and then press the SET button, the first and second LED bright and the third LED flash, input 20 pcs of the third coin.
3. Setting is completed, four LED are flashing, after 3 seconds to normal using.

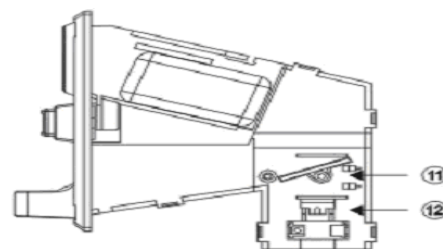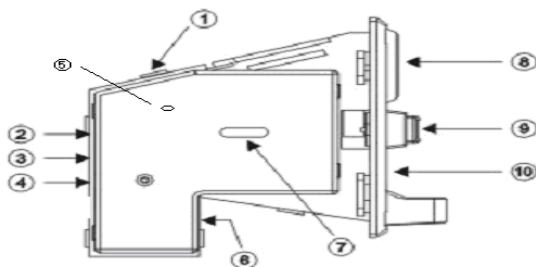

### YD-704 功能位置說明

NO.	名稱 Name	功能 Function	產品質量數值 The numerical value of product quality	
①	3 段微動開關 Three way switch	區分精準度：精準、正常、寬鬆 MGN. NOM. MAX	鑑別準確率 Accuracy rate of identification	99%
②	4pin 插座 4 pin Socket		鑑別速度 Speed for identification	0.6 秒 0.6 second
③	2 段微動開關 Three way switch	區分 NO 常開與 NC 常閉 NO. & NC.	電源 Power supply	DC+12±2V
④	3 段微動開關 Three way switch	COIN 信號傳輸速度區分快、中、慢 Output signal (fast) 25ms (medium) 50ms (slow) 100ms	功率 Power	2.4W
⑤	設定鍵 SET	SET	淨重 Net weight	克
⑥	插座 Socket	電磁閘門 Electromagnetic valve DC 12V	工作溫度 Working temperature	-5°C~65°C
⑦	LED	引導設定硬幣 Cooperate □ lighting indication	儲存溫度 Storage temperature	-5°C~65°C
⑧	投幣孔	Coin slot	工作溼度 Working humidit	≤95%
⑨	卡幣按鍵	Press-button for removal of coin blocked	大氣壓力 Atmospheric pressure	85Kpa-106Kpa
⑩	退幣孔	Coin Return slot	硬幣直徑 Diameter of coins	18mm-33mm
⑪	電磁閘門	排除偽幣用 Position of electromagnetic strobe	硬幣厚度 Thickness of coins	1.4mm-3.5mm
⑫	防釣夾	防投機取分用 Anti-phishing & stealing points mechanism	外殼材料 Case material	Plastics